



FOUR-SPEED GEARBOX.

Illus- tration No.	Quote this No. and name of part when ordering.	Description.
1	H.1/35	Gearbox cover
	H.54A	" " bolt (long)... ..
	H.54B	" " " (short)
2	H.2	" case
	H.3	" felt washer
	H.4	" dished washer
3	H.7	Mainshaft
	H.5	" ball race (large)
	H.6	" " (small)
4	H.8	" sleeve
5	H.9	" 18T. high gear pinion
6	H.10	" " " " dog
7	H.11	" 25T. and 21T. sliding gear
8	H.12	" 30T. low gear pinion
	H.55	" nut (R.H. thread)
	H.56	" " (L.H. thread)
	H.57	" spring washer
	H.52	" distance bush
9	H.13	Layshaft
10	H.14	" bush (case end)
11	H.15	" " (kickstart end)
12	H.16	" splined bush
13	H.17	" 18T. low gear pinion
14	H.18	" 23T. second gear pinion
15	H.19	" 27T. third gear pinion
16	H.20	" 30T. high gear and kickstart pinion
17	H.21	Kickstarter sleeve
18	H.22	" pawl
19	H.22A	" " plunger
	H.23	" " " spring
	H.24	" " pivot
20	H.25	" " stop plate
	H.26	" " " (rivet), per pair
21	H.27	" shaft bush
	H.28	" return spring
	H.29	" " cover
	H.42	" crank
	H.42A	" " pedal
	H.43	" " cotter pin, nut and washer
22	H.33	Operator (inside)
23	H.34	" fork
24	H.36	" anchor pin (long)
25	H.36	" " (short)
26	H.62	" locating plunger
	H.63	" " " spring
27	H.61	" " " box
28	H.49A	Final drive sprocket, 18T.
29	H.120	" " " locknut
	H.121	" " " felt washer
30	H.122	" " " screw

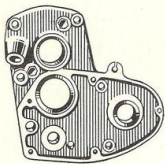

1

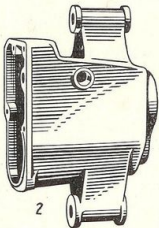

2



3



4



5



6



7



8



9



10



11



12



13



14



15



16



17



18



 
19



20



21



22



23



25



24



26



27



28



29



30